


How to use a FUJITSU wall mount control

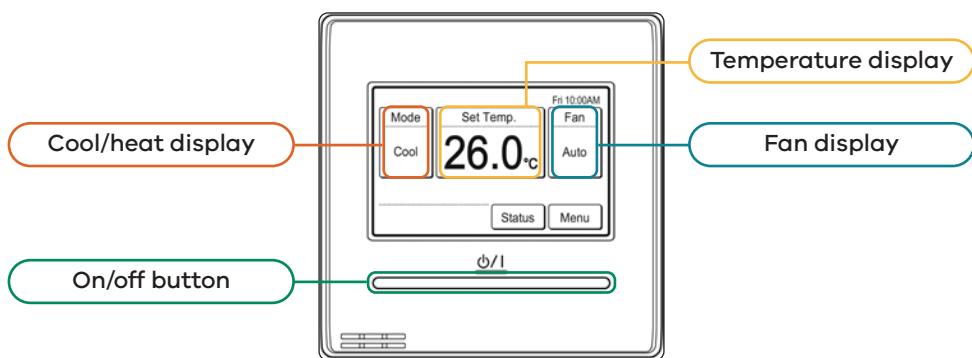

General information


- On very cold mornings, it can take up to 25 minutes for the unit to defrost and begin blowing warm air after it's turned on.
- The thermostat will make the unit turn off and on to keep the room at the selected temperature.

Turning the unit on and off

1. Turn on the unit by pressing the on/off button once (a green light will indicate the unit is on).
2. Once on, to turn off, press the on/off button once.


How to select the cooling or heating mode

1. To select the mode setting, touch the **Mode** button on screen.
2. Select **Cool** or **Heat**, then **OK** (ignore the other options).

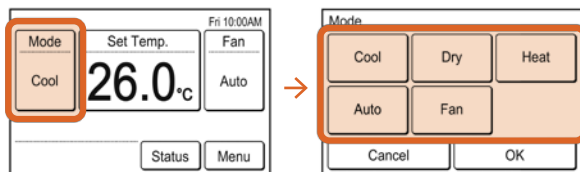

How to change the temperature


1. To select the temperature setting, touch the **Set Temp.** button on screen.
2. Arrows will appear to select the desired temperature.
3. Use the **▲ up and ▼ down arrows** to select the temperature, then **OK**.

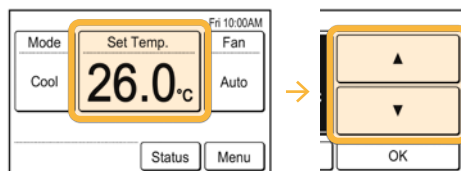

* A comfortable temperature is typically between 18–24 degrees.

How to select the fan speed

1. To select the fan speed setting, touch the **Fan** button on screen.
2. Arrows will appear to select the desired fan speed.
3. Use the **▲ up and ▼ down arrows** to select the fan speed, then **OK**.

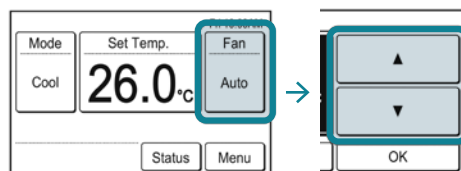

Find out more: You can access the full instruction manual for the wall mount control at the following web site:

<https://tinyurl.com/26x67j6v>

